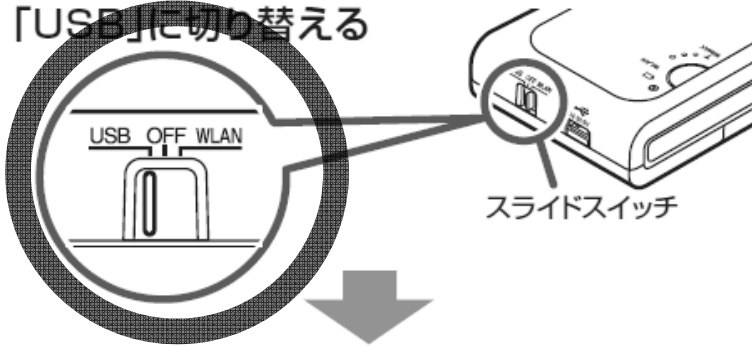
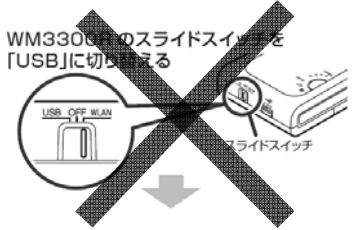


# 「つなぎかたガイド」 正誤表

この度は「Aterm WM3300R」をお求めいただき、まことにありがとうございます。  
添付されております「つなぎかたガイド」AM1-001185-002 には、下記の誤りがあります。  
お手数ですが、「正」に読み替えてくださるようお願いいたします。

No.	記載箇所	正	誤
1	STEP1 「ドライバとユーティリティをインストールしよう」 Windows の場合の最初	<p>WM3300R のスライドスイッチを「USB」に切り替える</p>  <p>The diagram shows a side view of the WM3300R device. A circular callout with a thick border highlights the slide switch. Inside the callout, the switch is shown in the 'USB' position. The text 'USB OFF WLAN' is visible above the switch. A magnifying glass icon is positioned over the switch. Below the callout, a large grey arrow points downwards. The label 'スライドスイッチ' (Slide Switch) is placed below the device.</p>	<p>図が間違っています</p>  <p>The diagram shows the same side view of the WM3300R device as the 'Correct' column. A circular callout highlights the slide switch, but it is shown in the 'WLAN' position. The text 'USB OFF WLAN' is visible above the switch. A magnifying glass icon is positioned over the switch. The label 'スライドスイッチ' (Slide Switch) is placed below the device. A large 'X' is drawn over the entire diagram, and a grey arrow points downwards from the bottom of the callout.</p>

以上